


### Installing Non-Grounded Metal Contactor

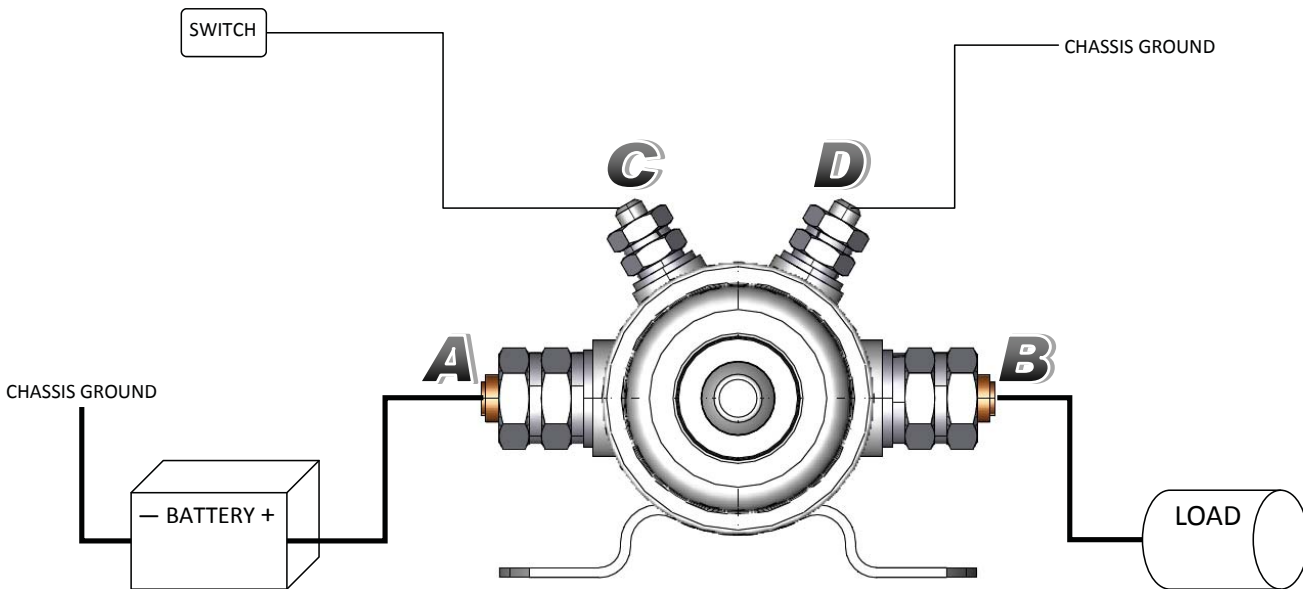

#### Wiring Diagram

1. Connect battery positive to high current stud (A).
2. Connect high current stud (B) to load.
3. Connect switch to coil stud (C).
4. Connect coil stud (D) to ground.

*Note: Current flow on A and B is reversible. Current flow on C and D is reversible.*